



## Installation Manual INE-W928R Kit


colour: black

- Seat Alhambra (6N)
- Škoda Fabia II
- Škoda Octavia II
- Škoda Roomster
- VW Caddy
- VW Sharan
- VW Tiguan
- VW Touran

part-no.:  
KIT-8VWT  
KIT-8VWTD

Compatible with these Alpine navigation devices

### INE-W928R

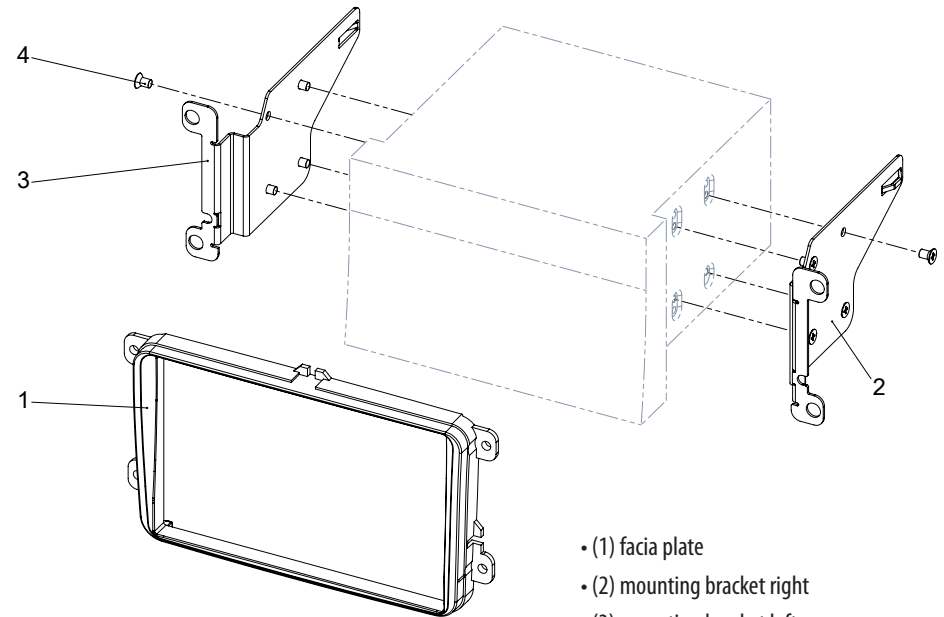

- (1) facia plate
- (2) mounting bracket right
- (3) mounting bracket left
- (4) recessed countersunk flat head screw

*All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*


## Škoda Fabia II / Octavia II / Roomster / VW Caddy / Touran



1. Unclip and remove OEM panel  
(see arrows)



2. Remove 4 screws  
  
Remove head unit

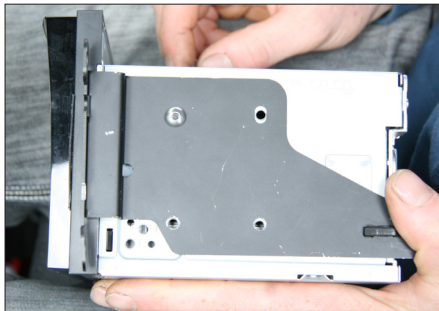


3. Attach mounting frames to  
Alpine INE-W928R




4. Connect all required circuit points  
  
Place Alpine INE-W928R  
on dashboard

## VW Tiguan

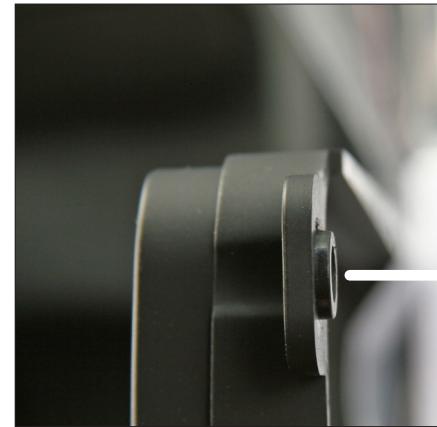

5. Connect all required  
circuit points  
Place Alpine INE-W928R  
on dashboard

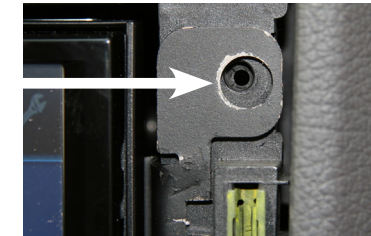

Place fascia plate  
*Put dome of fascia plate  
exactly over the holes of  
mounting frames  
(see arrow above)*



Install OEM panel to finish  
installation

## VW Tiguan




1. Unclip and remove OEM panel (see arrows)

Remove 4 screws of OEM head unit




2. Remove 4 screws

Remove head unit

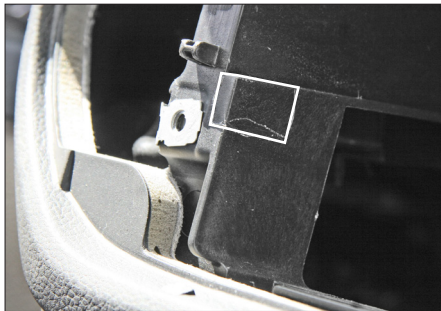


3. Cut away plastic to clear space for Alpine INE-W928R

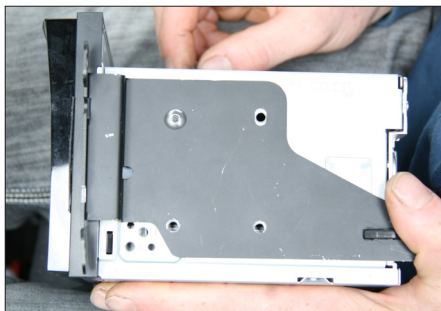


4. Attach mounting frames to Alpine INE-W928R


## Škoda Fabia II / Octavia II / Roomster / VW Caddy / Touran

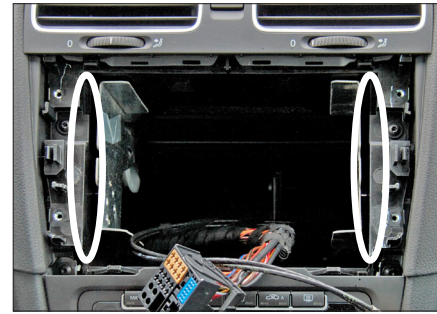

5. **If necessary:**  
Cut away plastic to clear space for Alpine INE-W928R

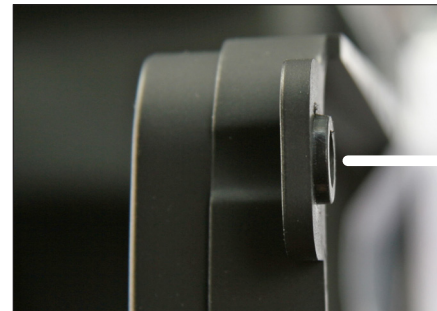

6. Place fascia plate

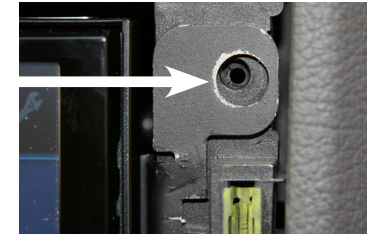

*Put dome of fascia plate exactly over the holes of mounting frames (see arrow above)*

Fix fascia plate with 4 screws



7. Install OEM panel to finish installation



## Seat Alhambra / VW Sharan



1. Open top shelf  
Remove 2 screws



2. Remove top shelf inlay  
Remove 2 screws on top




3. Remove OEM panel

## Seat Alhambra / VW Sharan




4. Remove 4 screws  
Remove OEM head unit


**If necessary:**  
Cut away plastic to clear space  
for Alpine INE-W928R

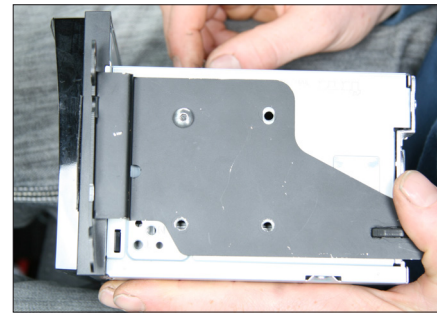

5. Attach mounting frames to  
Alpine INE-W928R

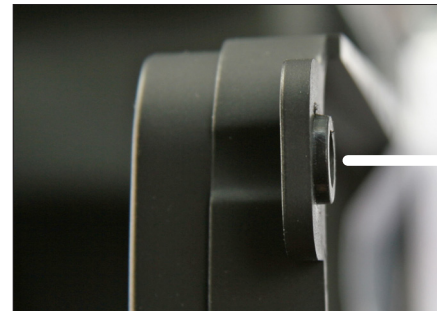


6. Place fascia plate



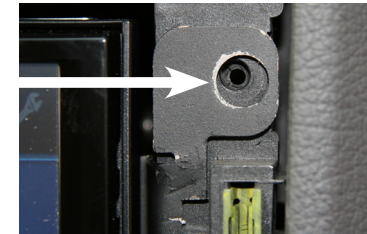


7. Connect all required circuit  
points  
Place Alpine INE-W928R  
on dashboard


Fix fascia plate with 4 screws  
Install everything in reverse  
order to finish installation

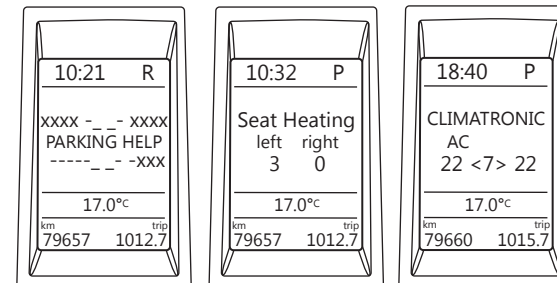


After:

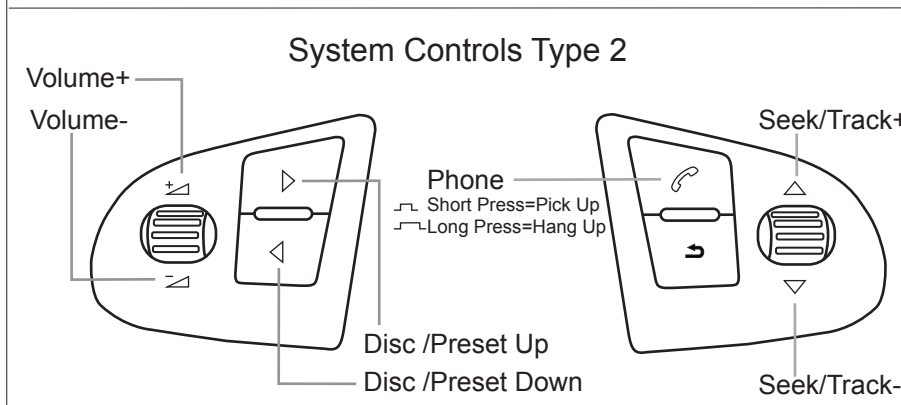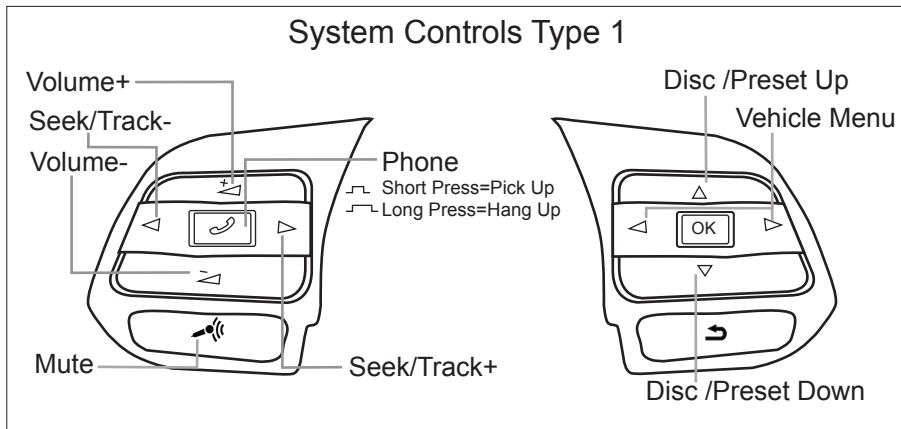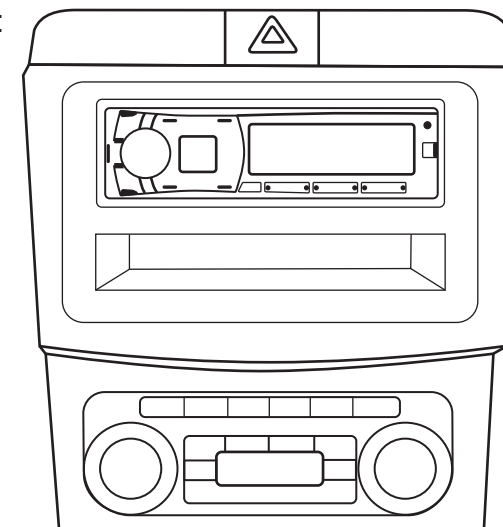

Before:

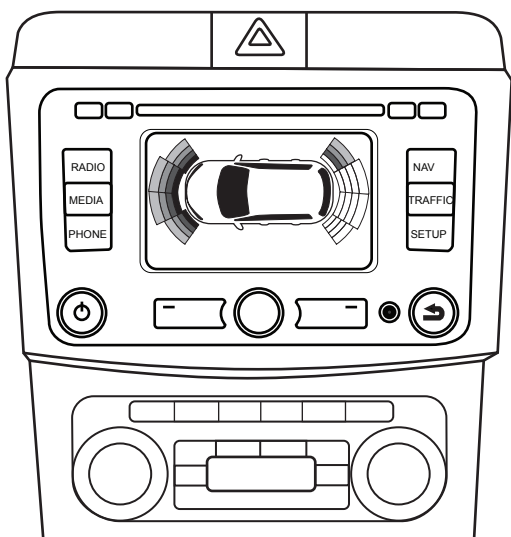

Vehicle harness

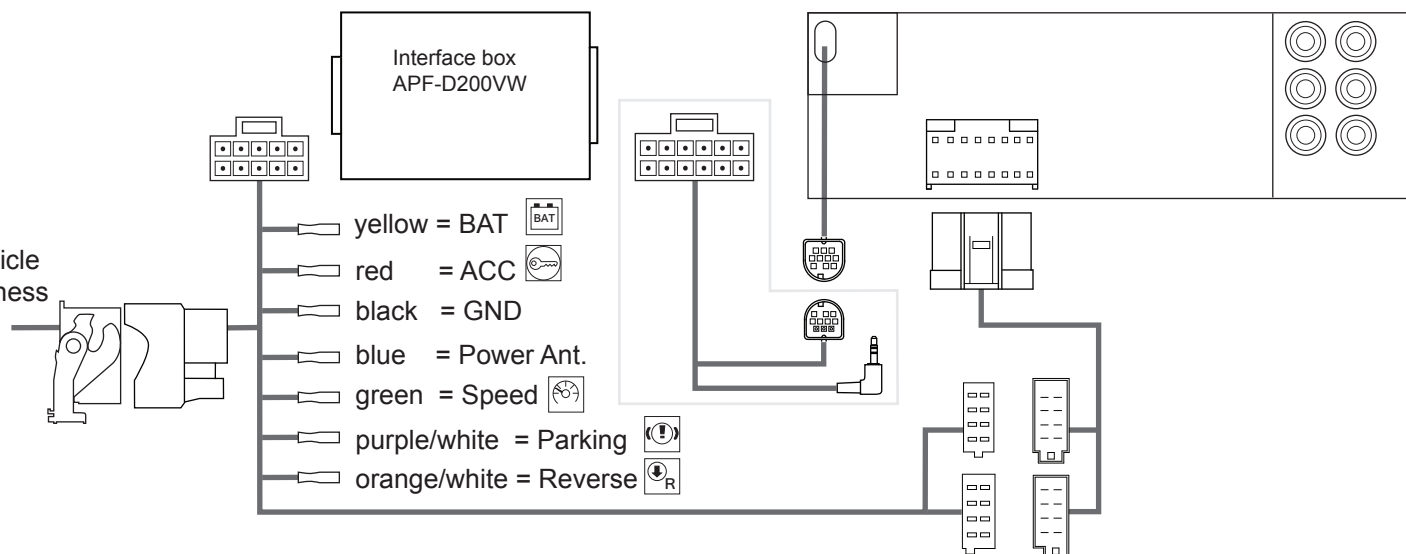

Make	Model	Model code	Year
Volkswagen	Amarok	2H	2010→
Volkswagen	Beetle	5C	2011→
Volkswagen	Caddy	2K	2010→
Volkswagen	CC	3CC	2012→
Volkswagen	EOS	1F	2009→
Volkswagen	Golf VI	1K	2009→2014
Volkswagen	Passat B7	36	2010→
Volkswagen	Passat CC	35	2008→2012
Volkswagen	Polo	6R	2009→
Volkswagen	Scirocco III	13	2009→
Volkswagen	Sharan	7M	2010→
Volkswagen	Tiguan	5N	2010→
Volkswagen	Touran	1T	2010→
Volkswagen	T5 facelift	7H	2010→
Seat	Alhambra MK2	7N	2010→
Seat	Leon MK2	1P	2009→2012
Seat	Toledo	KG	2013→
Skoda	Fabia MK2	54	2012→
Skoda	Octavia MK2	1Z	2009→2013
Skoda	Roomster	5J	2012→
Skoda	Rapid	NH	2012→
Skoda	Superb MK2	3T	2008→
Skoda	Yeti	5L	2009→